





Fitting HIAC Recessed Access Cover

(HIAC covers are generally supplied with gas springs removed for re-fitting after installation).

1

Check size of structural opening and recessed dimensions against overall frame sizes to determine packing/grout requirements to ensure top of frame will be flush with F.F.L.

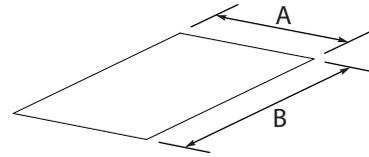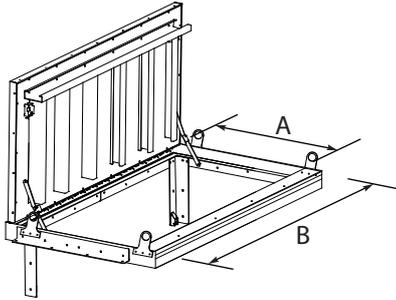

2


Ensure bottom of structural recess has suitable packing/grout.

3

Using slings if necessary lower access cover into recess or if fitted the lifting points supplied.




4

Check top of frame is flush with F.F.L. and frame is not twisted.

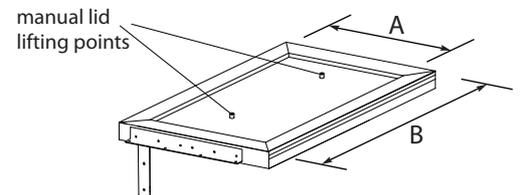

5

Check gas spring bracket(s) or motors are flush with the inside of the hole. Pack if necessary. It is critical that the gas spring brackets are vertical and solid against the inside of the opening.

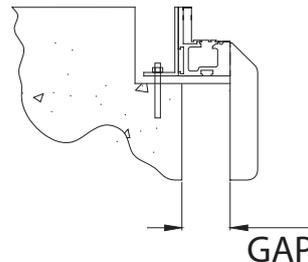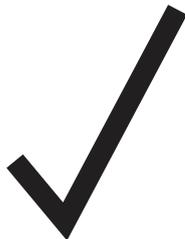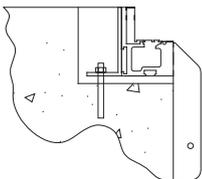

6

Fit frame into position. Remove any slings or lifting points as appropriate. Back fill as required and allow to set. Do not get grout inside the outer frame and inner frame, this will effect the opening of the unit later. Use masking tape around the top of the frame to stop grout impeding.



7

Check access cover by opening and closing lid using the manual lifting points and eyes. Remove dust cover with allen key and insert the "Tee" key into the boss near the front edge and turn the release lock before lifting.

8

Fix the slabs/tiles/carpet into the recessed lid as required and allow to set.

9

Secure fixing angles to the floor and tighten.

10


At all times ensure the safety hold open stay is released before closing the hatch.

11

Re-fit the gas springs according to the gas spring fitting instructions supplied.

SPECIAL NOTE: AT ANY TIME FOLLOWING INSTRUCTION OF COVER INTRO

To prevent debris from gathering into the gap between the lid and frame seal up with a sealant. A foam insert would need to be inserted first to stop the sealant dropping to the bottom of the frame.

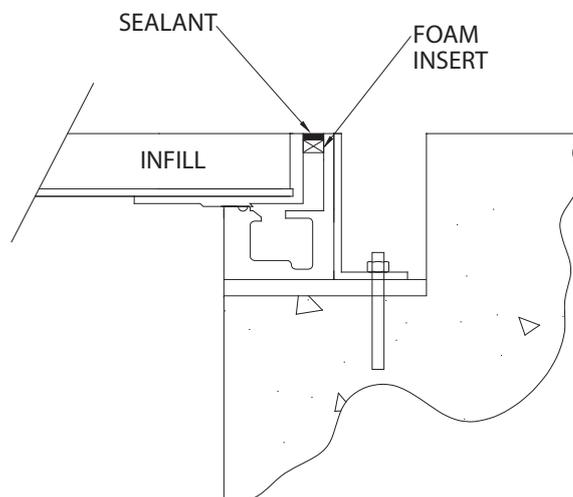

Once the surrounding area is free from debris and building activity the sealant can be removed.

For further information contact:

Surespan Limited

Leamore Close

Leamore Enterprise Park

Walsall

West Midlands

WS2 7NL

Tel: +44 (0)1922 711185

Fax: +44 (0)1922 714099

Email: sales@surespancovers.com

